

A large, stylized letter 'M' logo. The left portion of the 'M' is white, and the right portion is a vibrant pink. The background is dark purple with several overlapping, tilted rectangular shapes in various shades of purple and pink, creating a modern, geometric pattern.

M

Quick Setup Guide

Contents of Mediascreen Player Kit




Player

Micro-HDMI to
HDMI Cable



Power Adapter

Connection Diagram

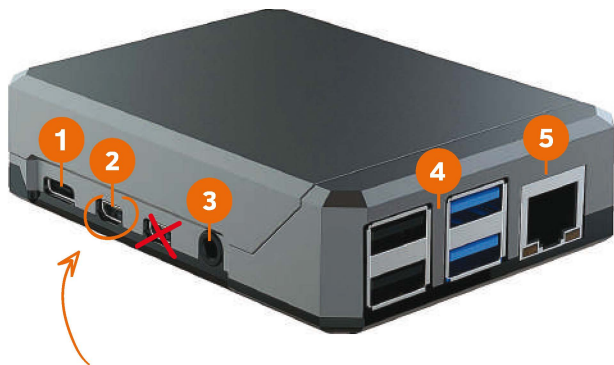

**Use only the Left
Micro HDMI Port**

1. Power Port
2. Micro HDMI Port
3. Audio Port
4. USB Ports
5. Network Port

Installation and Connection

STEP 1

Screen Connection

Connect the Mediascreen Player to your screen with the Micro HDMI cable in the package.

Only use the Left Micro HDMI Port on the Player, as shown below. Make sure the TV is powered On and set to the correct HDMI source.



STEP 2

Wired Connection

Connect the Player directly to your router/switch by plugging a Network cable (not included) into the Player's Network port.

If you have configured the Player with a WiFi network when you placed your order, go to **Step 3**.

If you want to pair the Player with a wireless network, go to the "Connect to a Wireless Network" section.



STEP 3

Power Connection

Plug the power cable's end into the Player's Power port and plug the power adapter into a power socket.

The Player will start to work automatically.



Your screen will start up after 10 seconds.

For a Wireless (WIFI) Internet Connection

Connect to a Wireless Network

If you have a wired connection, you can initially use it to configure your Mediascreen Player's WiFi through the Mediascreen Portal. If not, you can configure it as follows:

1. Connect a keyboard to any USB port of the player.
2. Press Ctrl+Alt+F12 (all 3 keys together).
3. Follow on-screen instructions to connect to the WiFi network. Make sure you configure the exact same WiFi settings on the Mediascreen Portal as well.

Having Trouble?

Is your screen not showing anything?

Make sure your screen is On and that the screen input is set to the correct source (e.g. HDMI 1), which is the port you connected your Player to.

Boot-up seems to be stuck on the Mediascreen logo?

Wait at least 10 minutes before worrying.

Is the Player still appearing as "Offline"?

Try using an Ethernet cable instead of WiFi.

Or unplug the Ethernet cable, wait 10 minutes and plug it in again.

Still not working?

Avoid rebooting constantly, it might do more damage than good, just let us know and we will help you out.